

BAUMACHINEN TEILE**KOMATSU**

Teile Nr.	Bezeichnung	Fax 00496938019868
6127.11.3133	NOZZLE ASSY	info@dieselspareparts.de
DK 134130-9320 (DK 134199.0320)	PLUNGER ASSY	
17A.15.05140	SERVICE KIT COVER VALVE	
14X.15.05130	SERVICE KIT RELIFE VALVE	
17A.15.05150	SERVICE KIT TRANS JOINT	
6128-81-7042 (6128.81.7043)	ELEMENT ASSY AIR	
6127-11-5440	FLANGEMAFLER	
600.311.8291 (600.311.8293)	FUEL FILTER	
07102.20303	HOSE	
07102.20314	HOSE	
07102.20608	HOSE	
07114.01010	HOSE	
175.30.24242	HOSE	
07102.20314	HOSE(PACKING)	
01803.02430	NUT	
07000.03095	O-RING	
07000.13035	O-RING	
07000.15220	O-RING TILT	
07000.03110	O-RING UP TILT	
600.211.1230	OIL FILTER	
07063.01100	OIL FILTER HAYDROLIC	
07000.03110	O-RING UP TILT	
07000.12135	O-RING ROD KIT	
707.51.75110	PACKING ROD LIFT	
6127.11.5424	PIPE MAFLER	
07146.02136	RING BACK UP	
07001.05220	RING BACK UP TILT	
170.30.14230	RING TRACK	
07155.01435	RING WEAR	
07155.02250	RING WEAR	
07016.20758(144.63.94170)	SEAL DUST	
195.63.94170	SEAL DUST	
175.06.39961(175.06.39960)	TEMPRETURE SENDING UNIT	
175-78.34141(175.78.31293)	TIP LONG POINT	

175.78.31230	TIP RIPPER	Fax 00496938019868
175.78.31231(175.78.31232)	TIP RIPPER	info@dieselspareparts.de
07019.00130	TRUCK SEAL DUST	
707.42.14012	U-PACKING	
600.411.1151(6710.61.8113)	WATER FILTER	
6134.51.5120	OIL FILTER ENGINE	
6136.21.3510	SEAL FRONT COVER	
6130.21.4231	SEAL REAR	
6150.21.1490	BUSHING CAM SHAFT	
6150.31.3040(6151.31.3040)	CRANK PIN METAL STD	
6150.K2.9901(6150.K2.1400)	CYLINDER BLOCK GASKET	
6150.K1.9901(6150.K1.1200)	CYLINDER HEAD GASKET	
6150.12.1351	GUIDE EXHAUST VALVE	
6150.12.1341	GUIDE INTAKE VALVE	
6151.22.2220(6150.21.2221)	LINNER CYLINDER	
6150.21.8000	MAIN BEARING STD	
6151.31.2420(6150.31.2410)	PIN PISTON	
6150.31.2112(6150.31.2111)	PISTON	
6150.29.8050	TRUST METAL ASSY	
6136.42.4520	VALVE COLLET	
6150.41.4210	VALVE EXHAUST	
6150.41.4111	VALVE INTAK	
6150.41.4420	VALVE SPRING INTAK	
6138.31.3040(6136.32.3040)	CRANK PIN METAL	
6137.K2.9901(6137.K2.1302)	GASKET KIT BLOCK	
232.70.12420	GUIDE	
6137.22.2210	LINER CYLINDER	
6136.21.8010(6136.22.8010)	MAIN METAL ASSY	
6137.32.2130	PISTON ASSY	
6136.42.4110(6138.42.4110)	VALVE INTAK	
175.03.31512	Hose	
170.30.14230	RING TRACK	
.07155.01435	RING WEAR	
.07155.02250	RING WEAR	
07016.20758(144.63.94170)	SEAL DUST	
195.63.94170	SEAL DUST	

07103.50324	HOSE PIN PULLER	Fax 00496938019868
17A-61-13151	HOSE KIT	info@dieselspareparts.de
07124.01022	HOSE REPAIR BLOCK	
01011.62415	BOLT ROLLER	
175.30.32151	SPACER GUARD	
6150.31.2030	PISTON RING	
6150.41.4411	VALVE SPRING EXHAUST	
6137.31.2040	PISTON RING ASSY	
9S3135	O-RING KIT	
1R0749	FILTER, FUEL	
610273	FILTER, AIR-PRIMARY	
5P8249	WASHER 7/8" ID	
9W2678	PIN, LOCK GET 8E6358	
2F0025	TUBE	
8E4193	END BIT	
1R0749	FILTER, FUEL	
9S3135	O-RING KIT	
4P9942	SEAL, END TANK(WIDE)	
4P9943	SEAL, END TANK(NARROW)	
1R0749	FILTER, FUEL	

140H MOTOR GRADER

1663359	Fax 00496938019868
1301950	info@dieselspareparts.de
1R0739	
1R0774	
1857025	
2384462	
1361599	
1856590	
610273	
610274	
5D9553	
3F5108	
4K0367	

8E5531	Fax 00496938019868
1R0750	info@dieselspareparts.de
1705187	
3K8782	
8M8948	
9X3463	
1700560	
6L8617	
7C9309	
D8 TRACK TYPE TRACTOR	Fax 00496938019868
1182018	info@dieselspareparts.de
7C9001	
2339238	
1R0716	
1328875	
1391537	
1328876	
2442050	
2292759	
612505	
612506	
6Y5540	
4T6381	
8E4194	
4J9058	
2J3507	
5P8250	
9W2451	
6Y3394	
8E4743	
1R0749	
1291351	
8M8948	
3K8782	

7N9943	Fax 00496938019868
7N1996	info@dieselspareparts.de
1386744	
1730948	
5P7665	
7H3608	
311119	
7X7700	
2024081	
6V1724	
6V1725	
966G-II WHEEL LOADER	Fax 00496938019868
CA 2201858	info@dieselspareparts.de
CA 1873307	
CA 1R0762	
CA 1R0770	
CA 1R0716	
CA 1G8878	
CA R0773	
CA 1140358	
CA 1140359	
CA 1U3352	
CA 2281779	
CA 2J0744	
CA 1J2176	
CA 8T6745	
CA 1672209	
CA 1672320	
CA 1672471	
CA 8J8375	
CA 8T1793	
CA 1857674	
CA 612505	
CA 612506	
CA 1679671	

CA 9X4492	Fax 00496938019868
CA 9X4493	info@dieselspareparts.de
CA 9W1442	
CA 9W1446	
CA 1393285	
CA 1475088	
CA 1766997	
CA 1766998	
CA 8C3100	
CA 1B3867	
CA 311119	